

### 3-1. Using the touch screen

## Touch screen

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display, etc.

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".



- A** With navigation system
- B** Without navigation system

Button	Page
"CLIMATE"	P. 362
"AUDIO"	P. 412/ Navigation System Owner's Manual
"SETUP"	P. 345/ Navigation System Owner's Manual
"DISP"	P. 340/ Navigation System Owner's Manual
"MAP/VOICE"	Navigation System Owner's Manual
"DEST"	Navigation System Owner's Manual
"INFO/PHONE"	P. 350/ Navigation System Owner's Manual

## The initial screen



If the "ENGINE START STOP" switch is set to ACCESSORY or IGNITION ON mode, the initial screen will be displayed for a few seconds as the system starts up.

Adjusting the display

**STEP 1** Press “DISP”.

**STEP 2** Adjust the display as desired using “-” / “+” / “R” / “G”.

If you do not touch the screen for 20 seconds, the system will return to the previous screen.

► With CD mode



► With DVD mode



	“R”	“G”
“Color”	Red	Green
	“-”	“+”
“Tone”	Lighter	Darker
“Contrast”	Weaker	Stronger
“Brightness”	Darker	Brighter

### ■ To avoid damaging the touch screen

- Touch the screen lightly with your finger. If there is no response, remove your finger from the screen and try again.
- Remove any dirt on the screen by wiping with a soft cloth. Do not use detergent.

### ■ When using the touch screen

- If the screen is cold, the display may be dark, or the system may seem to be operating slightly slower than normal.
- The screen may seem dark and hard to see when viewed through sunglasses. Change your angle of viewing, adjust the display on the "Display" screen or remove your sunglasses.

### ■ Changing between day mode and night mode



When the headlights are turned on, the screen dims.

However, the screen can be switched to day mode by touching "Day Mode".

The screen will stay in day mode when the headlights are turned on until "Day Mode" is touched again.

The screen will not be displayed if the instrument panel light control is set to the brightest level.

### ■ To turn off the display

If "Screen Off" is touched, the screen display is turned off, and guidance is by voice only.

### ■ Turning on or off the rear display (if equipped)



Touch "Rear".

Inputting letters and numbers/List screen operation

Letters and numbers can be input via the screen.

■ To input letters and numbers

▶ Letters and numbers




Enter letters by touching the keys directly.

- : Backspace
- : To display letters and numbers
- : To display symbols
- : Space
- : To enter in lower case
- : To enter in upper case

▶ Symbols



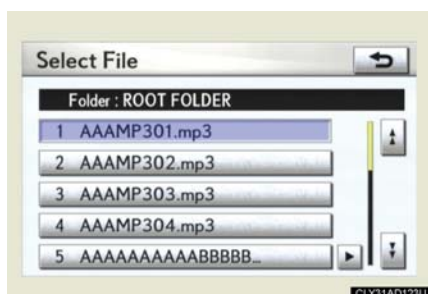

## ■ List screen operation



When a list is displayed, use the appropriate button to scroll through the list.






: To shift to the next or previous page. Touch  or  to scroll through the displayed list.



: Shows the displayed screen position.



: If  appears to the right of the item name, the complete name is too long for the display. Touch  to scroll to the end of the name. Touch  to scroll to the beginning of the name.

### ■ If you touch

The display returns to the previous screen.

### ■ Changing the keyboard layout

Keyboard layout can be changed. →P. 347

### ■ Function help

When “?” appears on the screen, touch “?” to display an explanation of the function.

3-1. Using the touch screen

Set up screen (without navigation system)

You can change the touch screen to your desired settings.

Press “SETUP” to display the “Setup” screen.




Switch	Page
“General”	P. 346
“Clock”	P. 598
“Voice”	P. 349
“Phone”	P. 549
“Audio”	P. 462
“Vehicle”	P. 249



#### General settings

This screen is used for various settings such as language selection and setting operation sounds.

Touch "General" on the "Setup" screen.

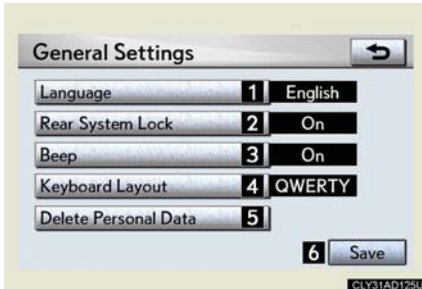

- 1 Select language
- 2 Rear seat entertainment system lock (if equipped)
- 3 Beep on/off
- 4 Select keyboard layout
- 5 Delete personal data
- 6 Save the settings

Make sure to save after changing settings.

#### ■ Rear system lock setting

The operation lock on the rear seat entertainment system can be turned on or off.

### ■ Keyboard layout setting

The keyboard layout can be changed.

#### ▶ “ABC” type




#### ▶ “QWERTY” type



### ■ Delete personal data

**STEP 1** Touch “Delete Personal Data” on the “General Settings” screen.

**STEP 2**

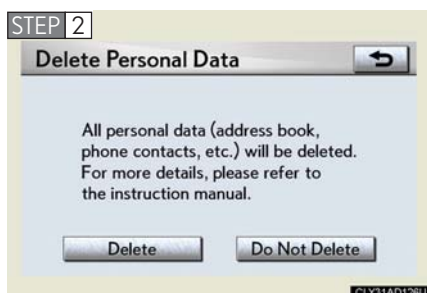

Touch “Delete”.

Check carefully beforehand, as data cannot be retrieved once deleted.


**STEP 3** A confirmation screen will be displayed. Touch “Yes”.

The following personal data can be deleted or turned to their default settings.

- Phonebook data
- Call history data
- Speed dial data
- Voice tag data
- Bluetooth<sup>®</sup> phone data
- Volume setting
- Details setting

## Voice settings

Touch “Voice” on the “Setup” screen.

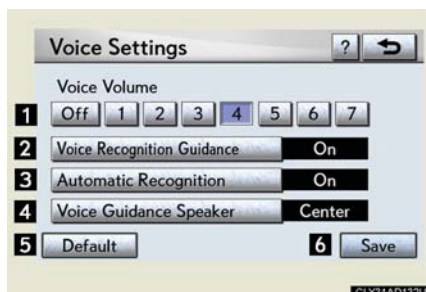

- 1 Select the voice guidance volume
- 2 Select the voice recognition talkback
- 3 Automatic recognition on/off without pressing the talk switch more than once
- 4 Select voice guidance projection
- 5 Restore default settings
- 6 Save the settings


Make sure to save after changing settings.

3-1. Using the touch screen

Information screen (without navigation system)

“Information” screen can be used to display the fuel consumption information or operate the hands-free system.

Press “INFO/PHONE” to display the “Information” screen.




Switch	Page
“Phone”	P. 535
“Fuel Consumption”	P. 351

## Fuel consumption

Fuel consumption information from recent resets will be displayed.

Touch "Fuel Consumption" on the "Information" screen.

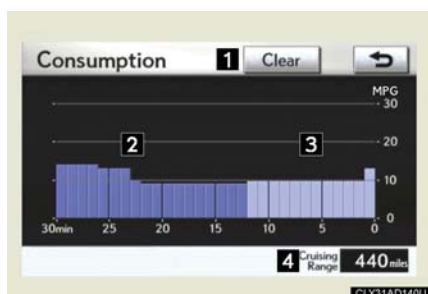

- 1 Resetting the consumption data
- 2 Previous fuel consumption per minute
- 3 Current fuel consumption per minute
- 4 Cruising range

Average fuel consumption for the past 30 minutes is divided by color into past averages and averages attained since the "ENGINE START STOP" switch was last turned to IGNITION ON mode.